
- 1. THE EXPOSED PORTION OF THE BOLLARD SHALL BE PAINTED YELLOW EPOXY.
- 2. BOLLARD AND ASSOCIATED ITEMS ARE INCIDENTAL TO THE ELECTRIC SLIDING GATE.


## BOLLARD DETAIL

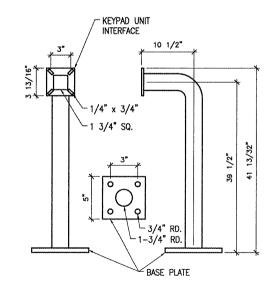

### GOOSENECK PEDESTAL DETAIL

SCALE: NONE


GOOSENECK PEDESTAL SHALL BE AMERICAN ACCESS SYSTEMS, INC. (7079 SOUTH JORDAN RD., UNIT 6, ENGLEWOOD, CO 80112, PHONE: 800-541-5677, FAX 303-799-9756) MODEL 18-001 OR APPROVED EQUAL.

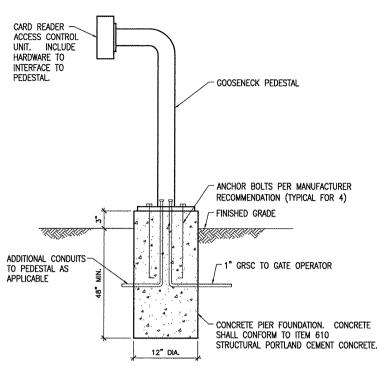

#### NOTES

- SEE SPECIAL PROVISION SPECS FOR REQUIREMENTS ON CARD READER ACCESS
- INCLUDE #12 AWG EQUIPMENT GND WIRE TO CARD READER.
- FACE OF CARD READER SHALL NOT EXTEND BEYOND BOLLARDS.

CARD READER ACCESS CONTROL UNIT PEDESTAL ELEVATION DETAIL SCALE: NONE

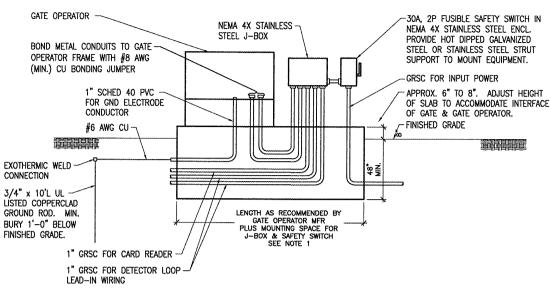

#### **NOTES**

- FOUNDATION FOR GATE OPERATOR SHALL BE 48" MIN. IN DEPTH AND OF THE LENGTH & WIDTH RECOMMENDED BY THE MANUFACTURER, PLUS SPACE FOR SAFETY SWITCH, J-BOX & CONDUITS.
- COORDINATE CONDUITS INTO FOUNDATION.
- CONFIRM CONDUIT SIZES AND WIRING REQUIREMENTS WITH THE GATE OPERATOR MFR. ADJUST/INCREASE CONDUIT SIZES WHERE APPLICABLE. REQUIREMENTS VARY BETWEEN DIFFERENT MANUFACTURERS.
- ALL ENCLOSURES RATED NEMA 4, 4X SHALL HAVE WATERTIGHT HUBS AT CONDUIT ENTRANCES U.L. LISTED NEMA 4, 4X FOR THE RESPECTIVE ENCLOSURE, TO MAINTAIN

## GATE OPERATOR FOUNDATION DETAIL

# **WARNING Moving Gate Can Cause** Serious Injury or Death. **KEEP CLEAR!** Gate May Move At Any Time.

Children Should Not Play Near Gate. Children Should Not Operate The Gate. Operate Gate Only When In Sight and Free of People and Obstructions. This Gate System for Vehicles Only.

#### NOTES

WARNING SIGNS/PLACARDS AS DETAILED ABOVE OR SIMILAR, SHALL BE INSTALLED WHERE CLEARLY VISIBLE ON BOTH SIDES OF EACH ELECTRIC SLIDE GATE. WARNING SIGNS SHALL BE WEATHERPROOF, CORROSION RESISTANT METAL, AS DETAILED ABOVE, AND IN A ACCORDANCE WITH THE RESPECTIVE GATE MANUFACTURER'S RECOMMENDATIONS, B&B ARMR PART NO. 0000-0017, HY-SECURITY PART

WARNING SIGN DETAIL

<b>DRT</b> 1-815	JRT		5	NOISIAN	0
JRT	JRT				
J#1	JK1	ŀ			
1-815	1-815	Ę			
1-815	1-815				
1-815	1-815				
1-815	I-B15				
1-815	1–815				
		1-815			

LW023

MID-AMERICAN AIR CENTER LAWRENCEVILLE-VINCENNES AIRPO LAWRENCEVILLE, ILLINOIS

HANSON

FRONTAL AREA FENCE INSTALLATION