




- AFTER SAWING, FLUSH JOINT WITH WATER OR AIR.
 CLEAN BY <u>SAND BLASTING</u> UNTIL SURFACES ARE FREE OF SAWCUTTING FINES
- 3. JUST PRIOR TO INSTALLATION OF BACKER ROPE, BLOW WITH OIL AND WATER FREE COMPRESSED AIR TO ELIMINATE SAND AND WATER.

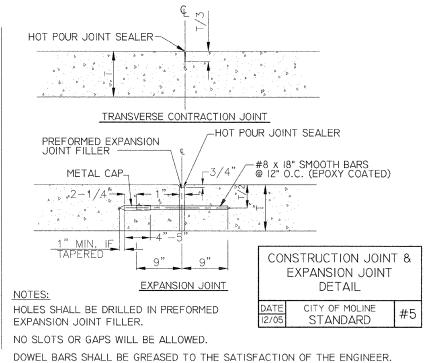

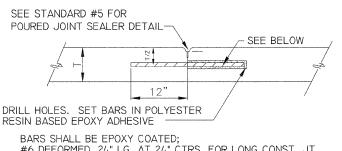

BARS SHALL BE EPOXY COATED; #6 DEFORMED, 24" LG. AT 24" CTRS. FOR LONG CONST. JT. #6 DEFORMED, 24" LG. AT 18" CTRS. FOR TRANS. CONST. JT. CONSTRUCTION JOINT

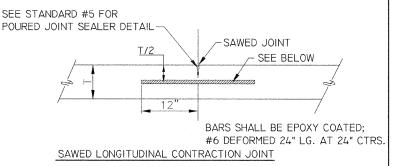

LONGITUDINAL JOINT &
TRANSVERSE JOINT
DETAIL
DATE CITY OF MOLINE #6



CITY OF MOLINE DEPARTMENT OF PUBLIC WORKS - ENGINEERING DIVISION 3635 4TH AVENUE, MOLINE, IL 61265 (309) 797-0700

CITY ENGINEER - SCOTT HINTON, P.E.

5TH AVENUE 14TH TO 17TH STREET MOLINE DETAILS

9/25/09	PER IDOT COMMENTS
8/14/09	PER IDOT COMMENTS
Date	Revision
	8/14/09

Date 5-15-09	Sheet 46
Scale NTS	50
MFT PROJ. # 09-00242-00-RP	DESIGNER ME.F