


60721

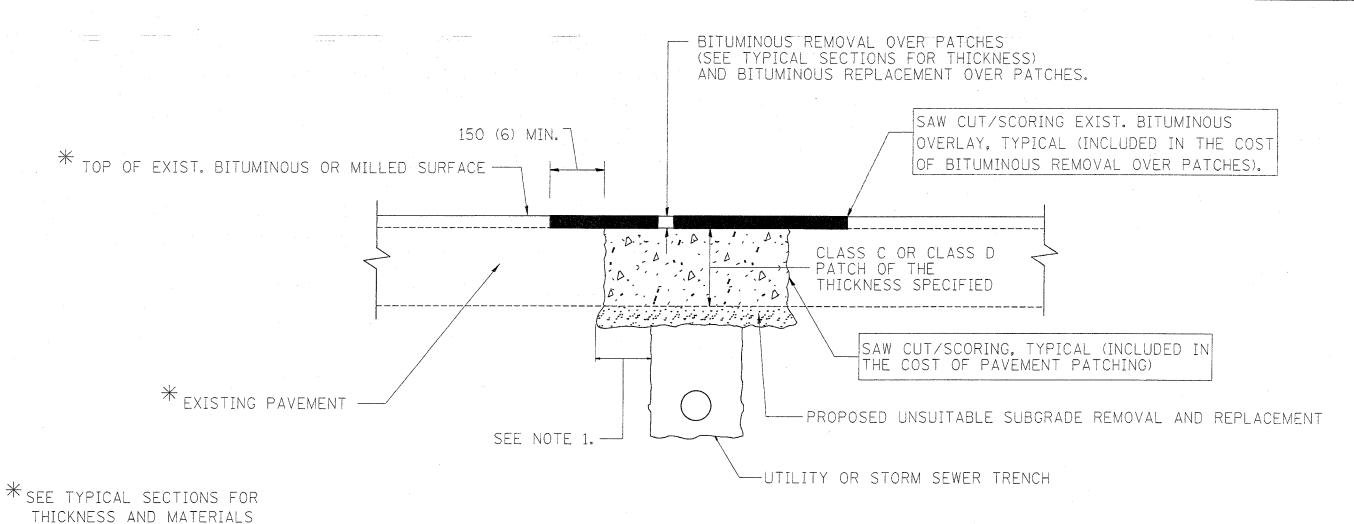

NOTES:

- 1. THE WIDTH OF THE FULL DEPTH PATCH OVER A TRENCH SHALL BE 300 (12) WIDER ON EACH SIDE OF THE TRENCH.
- 2. FOR METHOD OF MEASUREMENT AND BASIS OF PAYMENT, SEE SPECIAL PROVISION "PATCHING WITH BITUMINOUS OVERLAY REMOVAL".

SEQUENCE OF CONSTRUCTION

- 1. REMOVE THE EXISTING BITUMINOUS MATERIAL OVER THE AREA TO BE PATCHED.
- 2. REMOVE AND REPLACE FULL DEPTH PATCHES
- 3. REPLACE BITUMINOUS MATERIAL OVER THE AREA TO BE PATCHED.

ALL DIMENSIONS ARE IN MILLIMETERS (INCHES) UNLESS
OTHERWISE SHOWN.

REVISIONS		Ti
NAME	DATE	11
R. SHAH	10/25/94	
R. SHAH	01/14/95	
R. SHAH	03/23/95	
R. SHAH	04/24/95	
A. HOUSEH	03/15/96	
A. ABBAS	03/21/97	
A. ABBAS	01/20/98	
ART ABBAS	04/27/98	SCALE
	1	SCALE

ILLINOIS DEPARTMENT OF TRANSPORTATION

PAVEMENT PATCHING FOR BITUMINOUS SURFACED PAVEMENT

SCALE: VERT. HORIZ. DATE 03/08/2004 DRAWN BY

BD400-04 (BD-22)

03/08/2004 VI-BD22 GUILLAUMEFP