



## DETAIL: FURNISH AND INSTALL POND LINER




## DETAIL A


## **NOTES**

- 1. THE POND LINER SHALL BE ANCHORED IN PLACE BY PLACING THE ENDS IN A TRENCH WHICH HAS BEEN EXCAVATED TO ELEV. 433.00.
- 2. THE TRENCH SHALL BE 1' WIDE.

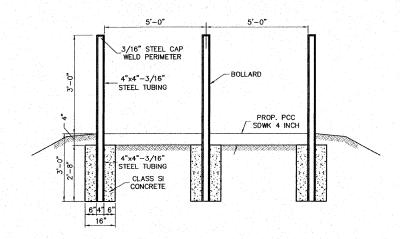


DETAIL: BOLLARDS

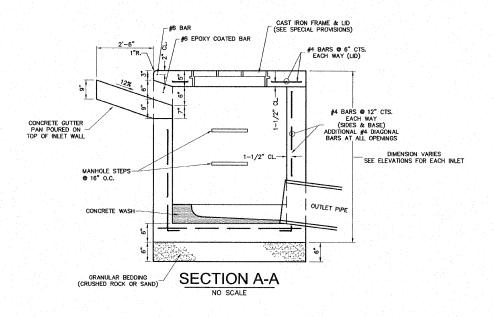

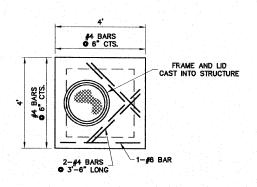



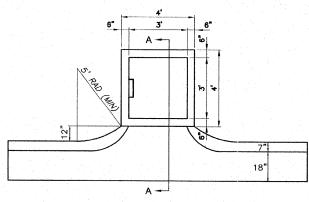

INLET BOX, SPECIAL PLAN