

TEMPORARY HOT-MIX ASPHALT TRANSITIONS

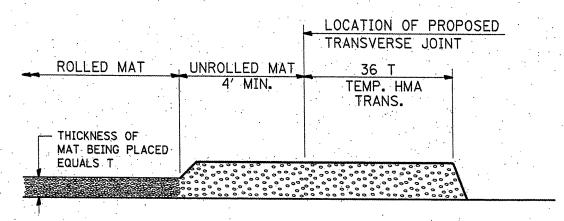


STEP I

- 1. PLACE HOT-MIX ASPHALT MAT, LENGTH 36 TIMES THE THICKNESS OF THE MAT BEING PLACED PAST THE PROPOSED TRANSVERSE JOINT LOCATION USING NORMAL OPERATING PROCEDURES.
- 2. EXTREME CARE SHOULD BE TAKEN TO MAINTAIN ENOUGH MATERIAL IN FRONT OF THE SCREED TO MAINTAIN REQUIRED PAVING DEPTH.

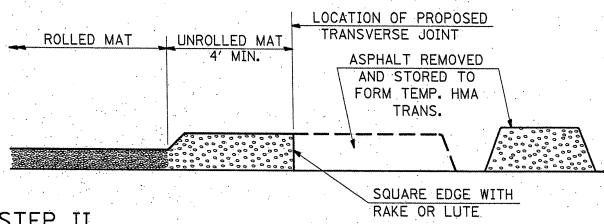


STEP II

- 1. MOVE THE PAVER OUT OF THE WAY AND REMOVE THE ASPHALT FROM THE AREA OF THE PROPOSED TEMPORARY HOT-MIX ASPHALT TRANSITION.
- 2. SQUARE UP THE END OF THE MAT WITH A RAKE OR LUTE.
- 3. NOTE THAT THE MAT WITHIN 4' OF THE END OF JOINT IS NOT TO BE ROLLED AT THIS TIME.

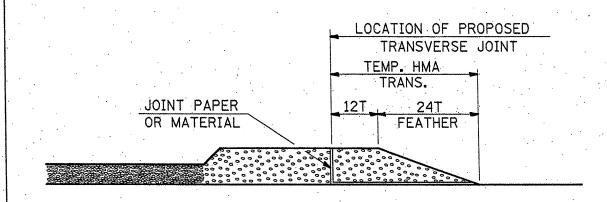

STEP III

- 1. JOINT PAPER OR OTHER PRESELECTED JOINT MATERIAL IS THEN PLACED IN THE CLEARED AREA AND THE EXCESS ASPHALT USED TO HAND FORM A TRANSITION TO THE DIMENSIONS SHOWN ABOVE.
- 2. NOTE THAT IN CONSTRUCTING THE TRANSITION, THE MAT DEPTH IS CONTINUED AS PART OF THE TRANSITION BEFORE FORMING THE FEATHER.

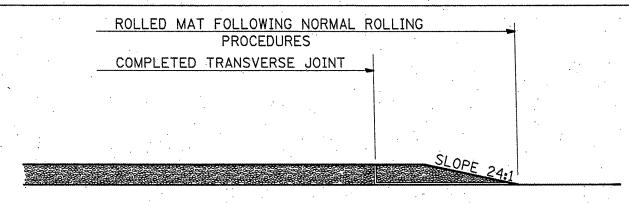

STEP IV

- 1. COMPLETE TEMPORARY TRANSITION BY ROLLING.
- 2. TO RESUME PAVING. AT THE JOINT. REMOVE TEMPORARY TRANSITION AND DISPOSE OF THE MATERIAL ACCORDING TO ART. 202.03 OF THE STD. SPECS. (COST INCLUDED IN THE CONTRACT).
- 3. CONSTRUCTING THE TEMPORARY TRANSITIONS WILL NOT BE PAID FOR SEPARATELY IN ACCORDANCE WITH ARTICLE 406.14 OF THE STANDARD SPECIFICATIONS.

STD9-	26
-------	----

				•		•	
FILE NAME =	USER NAME = mocordkr	DESIGNED	REVISED			F.A.P.	SECTION COUNTY TOTAL SHEET
ci/pw_work/PWIDOT/MCCOROKR/dØIØ5162/d99	8825-aht-miso.dgn	DRAWN	REVISED -	STATE OF ILLINOIS		RIE	JOHE 13 NO.
, '		CHECKED	REVISED	DEPARTMENT OF TRANSPORTATION			CONTRACT NO. 98825
	PLOT DATE = 1/5/2009	DATE -	REVISED -		SCALE: SHEET NO. OF SHEETS STA. TO STA.	FED. 7	