


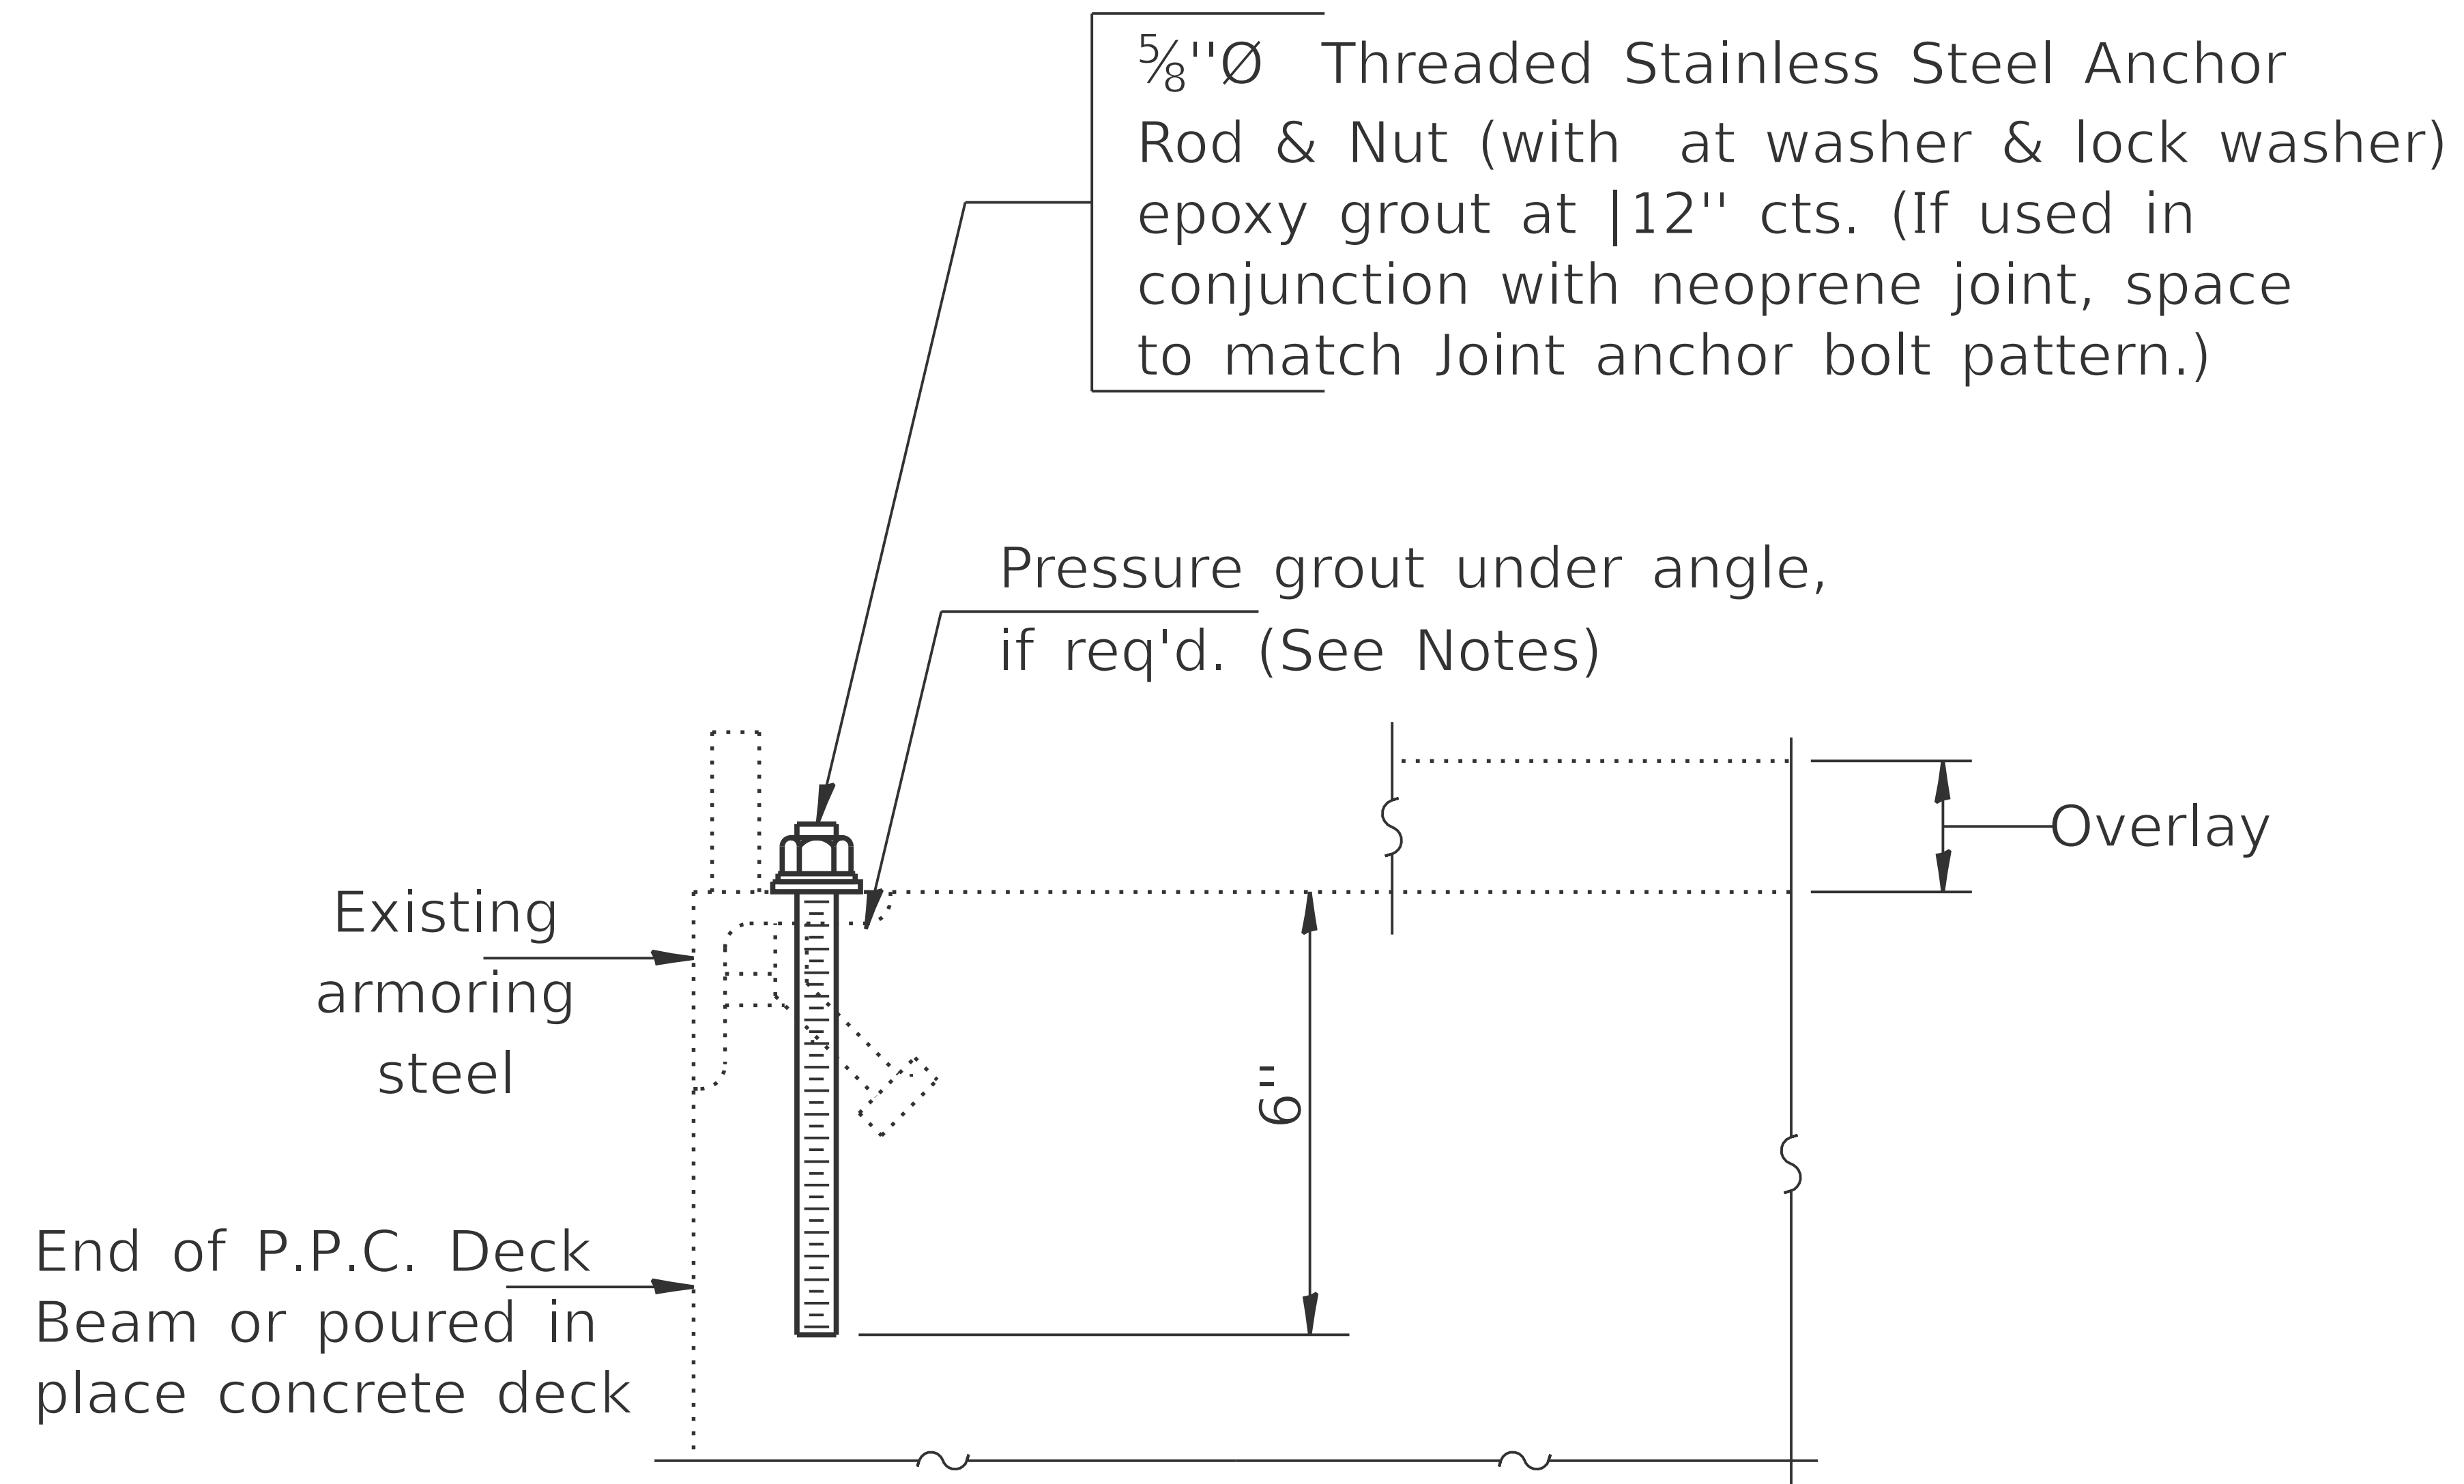

Notes: Loose angles will be bolted to the end of the deck or P.P.C. deck beams by eld drilling holes through the existing angles and epoxy grouting threaded rods into the deck.

If the existing angles sound loose after the epoxy grouted rods are in place, holes will be drilled through the angles and epoxy injected under the angles.