


*(0202 4 0208) RS-8 62748

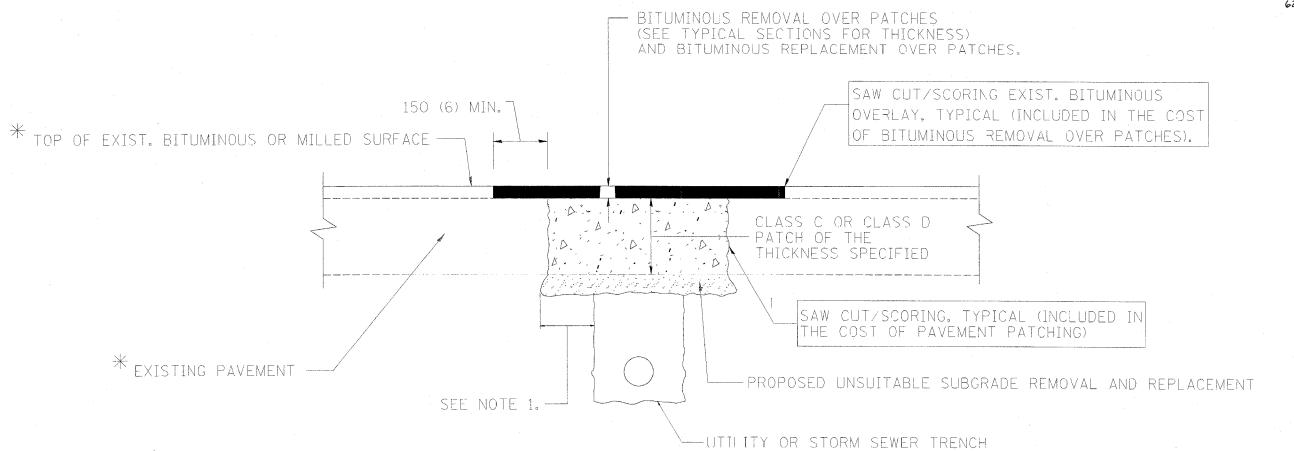

NOTES:

- 1. THE WIDTH OF THE FULL DEPTH PATCH OVER A TRENCH SHALL BE 300 (12) WIDER ON EACH SIDE OF THE TRENCH.
- 2. FOR METHOD OF MEASUREMENT AND BASIS OF PAYMENT, SEE SPECIAL PROVISION "PATCHING WITH BITUMINOUS OVERLAY REMOVAL".

SEQUENCE OF CONSTRUCTION

- 1. REMOVE THE EXISTING BITUMINOUS MATERIAL OVER THE AREA TO BE PATCHED.
- 2. REMOVE AND REPLACE FULL DEPTH PATCHES
- 3. REPLACE BITUMINOUS MATERIAL OVER THE AREA TO BE PATCHED.

ALL DIMENSIONS ARE IN MILLIMETERS (INCHES) UNLESS

ILLINOIS DEPARTMENT OF TRANSPORTATION

PAVEMENT PATCHING FOR **BITUMINOUS SURFACED PAVEMENT**

SCALE: NONE DATE 10/18/2002

CHECKED BY BD400-04 (BD-22) REVISION DATE: 04/27/98

* SEE TYPICAL SECTIONS FOR THICKNESS AND MATERIALS