1) PLANTING NOTES -BACKFILL: EXISTING SOIL

THE CONTRACTOR SHALL MAKE, AT THEIR EXPENSE, WHATEVER ARRANGEMENTS NECESSARY TO PROVIDE ADEQUATE WATERING OF THE PLANTED AREAS THROUGHOUT THE CONTRACT DURATION. THE CONTRACTOR SHALL FURNISH ALL NECESSARY EQUIPMENT AND LABOR. THE CONTRACTOR SHALL FURNISH AND INSTALL 20 GALLON TREE GATOR BAGS AROUND SHADE TREES TO LEAVE ON SITE AFTER CONTRACT COMPLETION.

SHREDDED HARDWOOD 4 INCHES THICK, INSTALLED PER DETAILS

-TREE STAKING:
TREE STAKING (ALL SIZES) IS NECESSARY TO MAINTAIN TREES IN A PLUMB CONDITION DUE TO PROBLEMATIC WIND CONDITIONS. REFER TO STAKING DETAILS

-FERTILIZER:
AGRIFORM TABLETS, 21 GRAM SIZE AS MANUFACTURED BY THE SCOTTS COMPANY. APPLY AT THE FOLLOWING RATES:


CONTAINTER SHRUBS, 21 GRAM TABLET
1 GALLON POT - 1 TABLET
3 GALLON POT - 2 TABLETS
5 GALLON POT - 3 TABLETS

B & B TREES, 21 GRAM TABLET 4 TABLETS FOR EVERY FOOT OF ROOT BALL DIAMETER

-PLANTING LAYOUT AND INSTALLATION ALL TREES AND PLANTING BEDS SHALL BE WITHIN THE EXISTING CROP LAND. THE TREE RINGS AND PLANTING BEDS SHALL LINE UP TO THE EDGE OF THE EXISTING TURF. NO TURF SHALL BE DISTURBED. (EXCLUDING THE PLANTING BED AT THE RICHLAND SIGN)

LAYOUT OF ALL TREES AND PLANTING BEDS SHALL BE APPROVED BY THE ENGINEER (HOMER L. CHASTAIN AND ASSOCIATES) BEFORE

ALL PLANT SUBSTITUTIONS SHALL BE APPROVED BY THE LANDSCAPE ARCHITECT THROUGH REQUEST TO THE ENGINEER. EDGING OF PLANTING BEDS: REFER TO TRENCHED EDGE DETAIL.

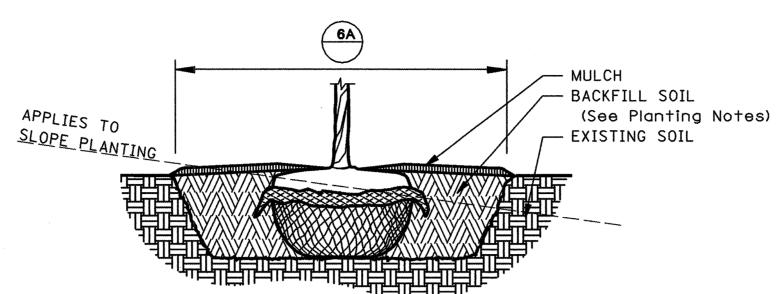

1. EXCAVATE PITS PER DETAIL. SCARIFY THE SIDES AND BOTTOM OF THE PIT BY SHOVEL CUTTING. PLANTING PIT WIDTH SHOULD BE 1 FOOT WIDER THAN THE WIDTH OF THE BALL.

2. SET PLANT ON UNDISTURBED NATIVE SOIL, OR THOROUGHLY COMPACTED BACKFILL, 3" ABOVE FINISH GRADE.

3. PLACE TREE IN UPRIGHT POSITION IN CENTER OF PIT. REMOVE BURLAP & WIRE BASKET FROM TOP OF BALL & HALF WAY DOWN SIDES.

4. BACKFILL HALFWAY UP THE ROOT BALL. THOROUGHLY PACK AND SETTLE BACKFILL TO FILL ALL VOIDS.

5. INSTALL FERTILIZE PER PLANTING NOTES. CONTINUE TO BACKFILL AND FILL ALL VOIDS UNTIL LEVEL WITH FINISH GRADE.

6. WATER WITHIN 2 HOURS OF INSTALLATION.


7. PLACE MULCH WITHIN 48 HOURS OF INSTALLATION. KEEP MULCH 4" FROM TRUNK.


8. USE OF NONBIODEGRADABLE TWINE SHALL NOT BE PERMITTED.

PLANTING NOTES NO SCALE

BALLED & BURLAPPED DETAIL DECIDUOUS & EVERGREEN TREE


NO SCALE

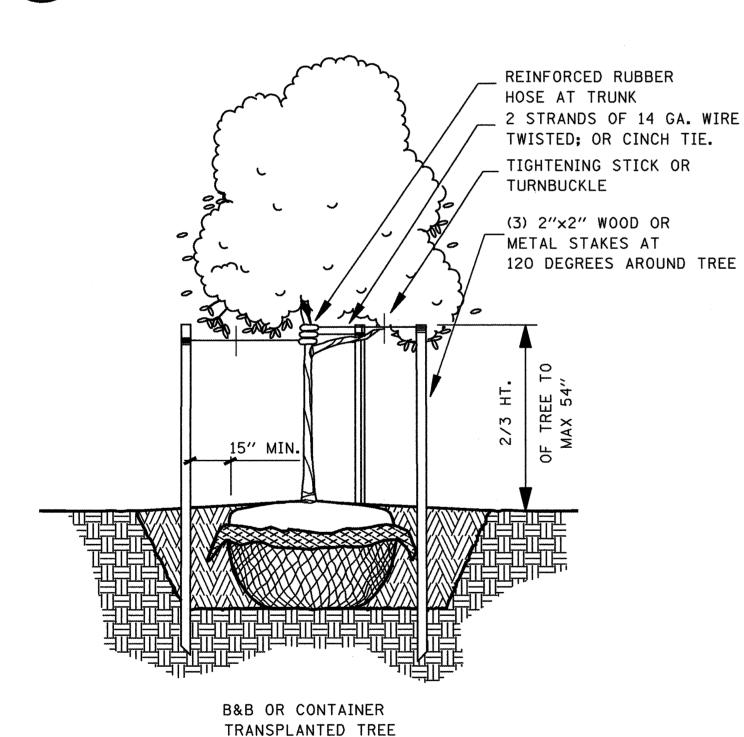

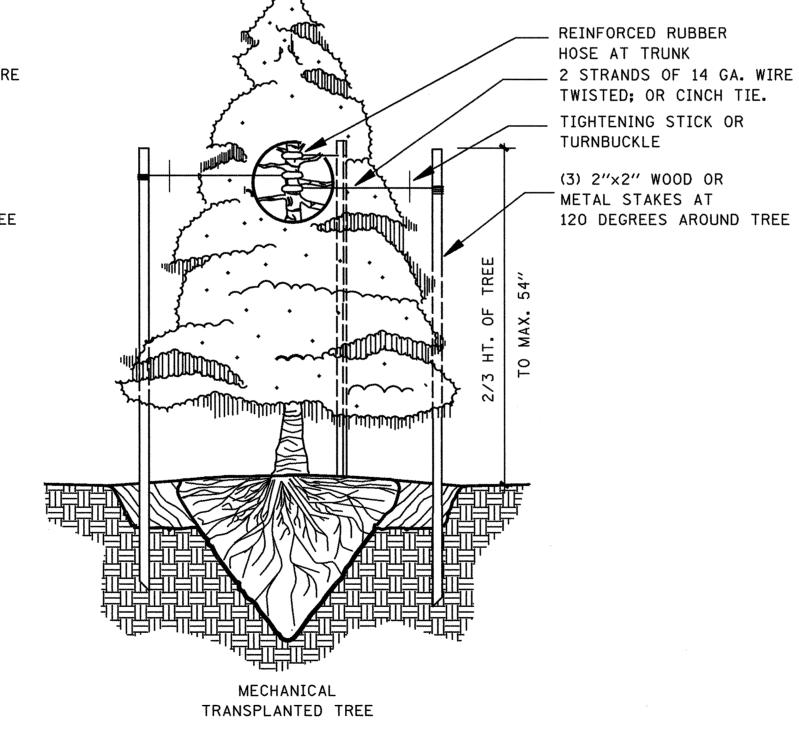

STAKING DETAILS

NO SCALE

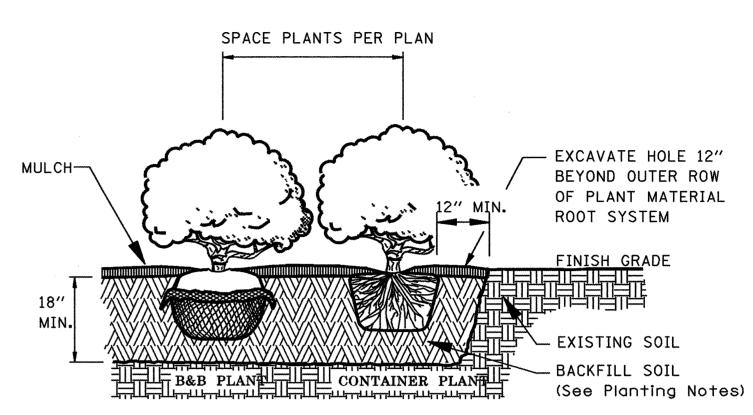

1. EXCAVATE PITS PER DETAIL. SCARIFY THE SIDES & BOTTOM OF THE PIT BY SHOVEL CUTTING. DIG ONE HOLE FOR EACH SHRUB, GRASS

2. REMOVE BURLAP FROM TOP OF BALL & HALF WAY DOWN SIDES AND/OR CONTAINER.

3. SET PLANT ON UNDISTURBED NATIVE SOIL, OR THOROUGHLY COMPACTED BACKFILL, 2" ABOVE FINISH GRADE.

4. PLACE SHRUB IN UPRIGHT POSITION IN CENTER OF PIT.

5. BACKFILL HALFWAY UP THE ROOT BALL. THOROUGHLY PACK AND SETTLE BACKFILL TO FILL ALL VOIDS.

6. INSTALL FERTILIZE PER PLANTING NOTES. CONTINUE TO BACKFILL AND FILL ALL VOIDS UNTIL LEVEL WITH FINISH GRADE.

7. WATER WITHIN 2 HOURS OF INSTALLATION.

8. PLACE MULCH WITHIN 48 HOURS OF INSTALLATION. KEEP MULCH 4" FROM TRUNK.


9. USE OF NONBIODEGRADABLE TWINE SHALL NOT BE PERMITTED.

10. SPACING OF PLANTS SHALL BE AS FOLLOWS:

5 GAL SHRUBS - 6 FT ON CENTER 3 GAL SHRUBS - 4.5 FT ON CENTER GRASSES - 5 FT ON CENTER FORBS - 4 FT ON CENTER

SHRUB, GRASS AND FORB DETAILS

NO SCALE

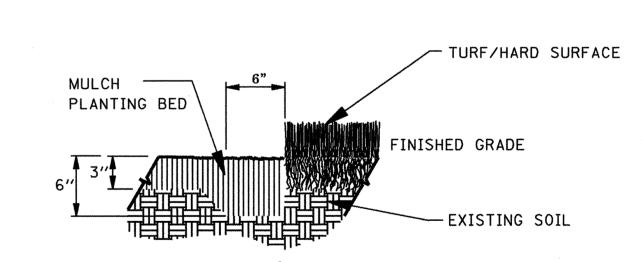

TRENCHED EDGE DETAIL

NO SCALE



LANDSCAPE DETAILS REVISIONS PROGRESS CITY MACON COUNTY, ILLINOIS DECATUR CHICAGO CHASTAIN & ASSOCIATES, LLP (217) 422-8544 (773) 714-0050 ROCKFORD CONSULTING ENGINEERS (815) 489-0050

DLB 2/09

CHECKED BY DATE PPW 2/09

BOOK NUMBER 478

PROJECT No.

5248

SHEET No.

Landscape Plan Prepared by:

MGC Home & Garden Services 610 E. Livingston St. Monticello, IL 61856 Ph: 217-762-2297 Fax 217-762-3285

CADD_Civil\ls_details.dgn 6/4/2009 12:01:28 PM